



VM 900

LIST OF THE EXPLODED VIEWS

From s/n. 297566 up Today



SHELL ASSY

COOLING SYSTEM

HYDRAULIC CIRCUIT

SPRAYER PUMP


ELECTRIC PARTS



VM 900

From s/n. 297566 up Today

SHELL ASSY

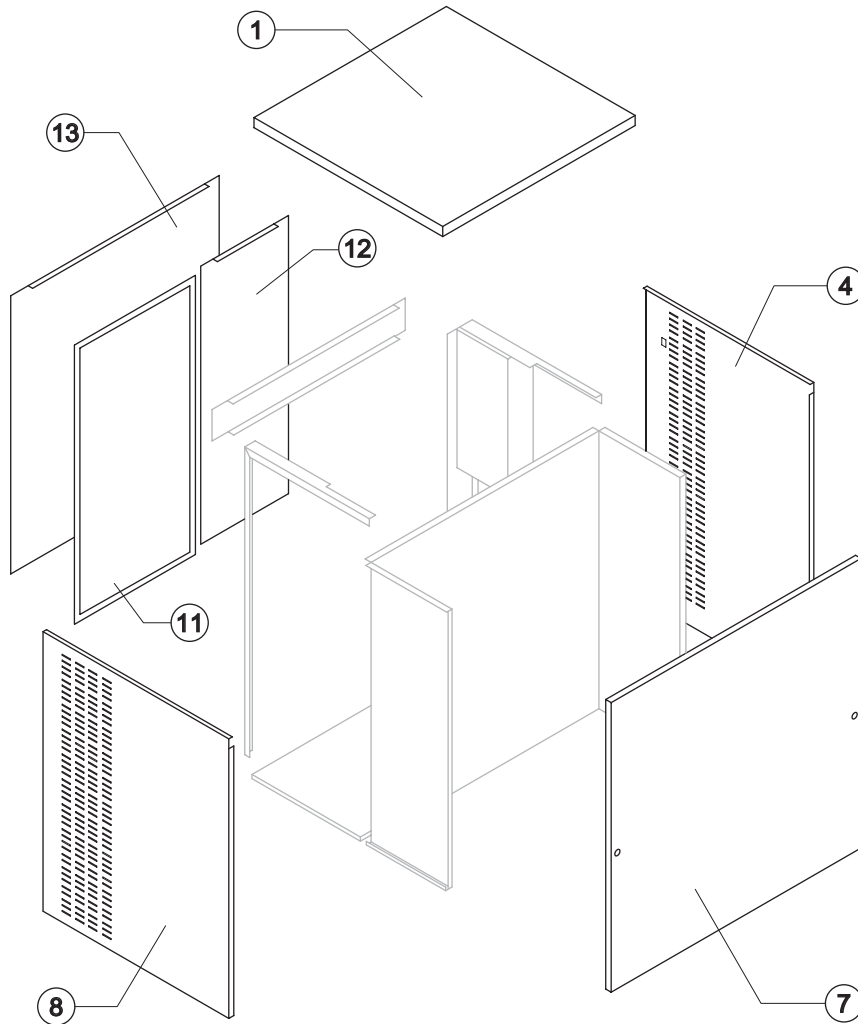

Common Parts

Ref.	Spare Description	Code
1	Top Assembly	C22813
4	Right Side Panel	22408
7	Front Panel Assembly	C22816
8	Left Side Panel	22822
10	Rear Cross Bar	22817

Parts for Air-Cooled Version Only

Ref.	Spare Description	Code
11*	Filter	18166
12	Rear Panel	21287

Parts for Water-Cooled Version Only

Ref.	Spare Description	Code
13	Rear Panel	21285




VM 900

From s/n. 297566 up Today

COOLING SYSTEM

Till s/n. 515427

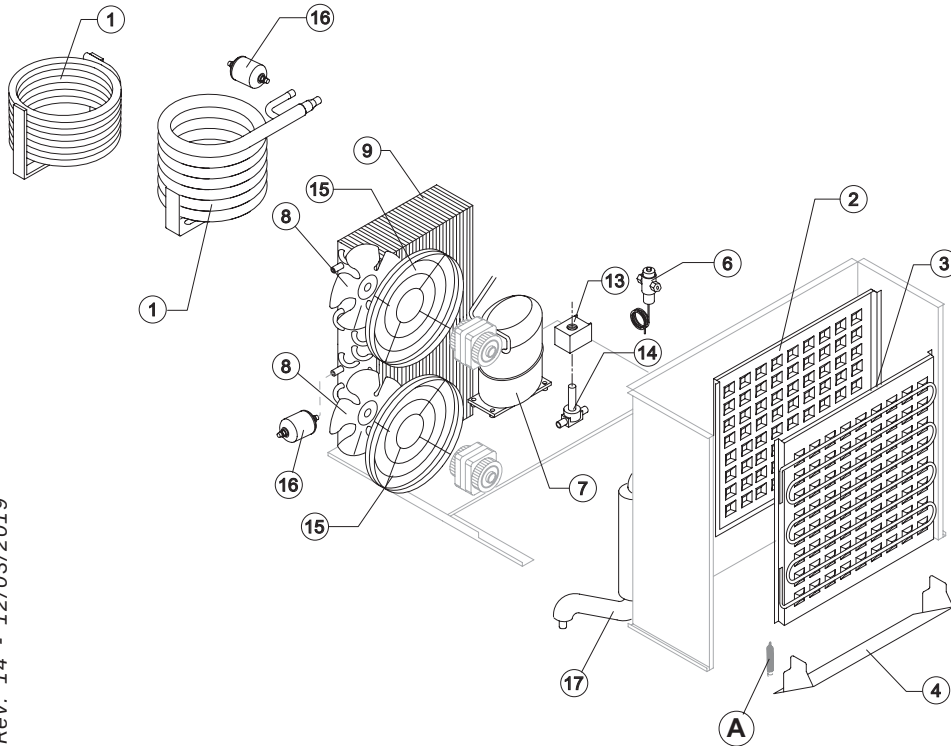

Common Parts

Ref.	Spare Description	Code
2	Evaporator (Back)	D10227
3	Evaporatore (Front)	D10228
4	Horizontally Hinged Panel	22608
7	Compressor	See Table
13*	Hot Gas Valve Coil	231294
14*	Hot Gas Valve Body	20409
16*	Liquid Line Drier	14084
17	Suctin Line	for the spare parts code give us the s/n.

Parts for Air-Cooled Version Only

Ref.	Spare Description	Code
8	Sucking Fan	20407
9	Air Condenser	20838
15	Fan Motor Grid	12056

Parts for Water-Cooled Version Only

Ref.	Spare Description	Code
1	Water Condenser	Current Version 14660
1	Water Condenser	Till s/n. 515427 14285
6	Pressostatic Valve	20149



Eliminated the Spring (horizontally hinged panel) ref. A, suggested removal even from the models where they are present.


Ref. 7 - Compressor

Voltage	Code Current Version	Code from s/n. 661503 till.....	Code till s/n. 661502
220-240V ~ 50Hz	231365	R231079% till s/n.946078	23647
220-230V ~ 60Hz	231385	R231081% till s/n.946078	23651
400-415V 3~ 50Hz	231379	R231085% till s/n. 958103	23709
220-230V 3~ 60Hz	231083	231083	23708

% if the model is air-cooled add suffix B, if it is water-cooled add suffix C



HYDRAULIC CIRCUIT



Ref.	Spare Description	Code
1*	Overflow Pipe	10399
2*	OR Gasket for Overflow Pipe	20233
3	Overflow Pipe Nipple	10471
4	Silicone Gasket	13219
5	Semirigid Polyethylene Gasket	13007
6	Bin Discharge Nut	10096
7	Water Basin	10395
8	Ice Cubes Slide	D12057
10	Overflow Pipe Nipple	13120
11	Drain Nipple	10431
12	Discharge Valve Connection Pipe - Discharge	13040
13	Discharge Valve Connection Pipe ("T"Shaped)	13102
14*	Overflow Cap	10305

Ref.	Spare Description	Code
9	Conenction with Plate	C20462



VM 900

From s/n. 297566 up Today

ELECTRIC PARTS

Common Parts

Ref.	Spare Description	Code
1*	Timer	See Table
3	"Cleaning" Switch	23619
4*	Bin Thermostat	R23005
5*	Evaporator Thermostat	R23597
6*	Green Light Switch (On-Off)	23327
7*	Contactor	See Table
12*	1 Way- Water Inlet Valve	23623
13	Safety Pressure Switch	23342
15*	Water Outlet Valve	23537

Parts for Air-Cooled Version Only

Ref.	Spare Description	Code
8	Anti Radio Interference Filter	Only 50Hz C23459
9	Anti Radio Interference Filter	Only 50Hz C23458
14*	Condenser Pressure Switch	23175
16*	Fan Motor	23121

Ref. 1* - Timer

Voltage	Code
50Hz	23635
60Hz	23632

Ref. 7* - Contactor

Voltage	Code
50Hz	23147
60Hz	23963